



Innovative Solutions for Gardeners Everywhere!®

Assembly Manual

© 2016 GRO Products All Rights Reserved

Vertical Growing Systems

For all Wall Mounted Models

VGWM Parts List

****pictured parts are not to scale****



Part A
Leg Segment • QTY 2



Part B
Header • QTY 1



Part C
Slats • QTY 5



Part D
Planter Box • QTY 2




Part E
Liner • QTY 2

Hardware Package

Part F

VGWM Part C (Slats) Detail

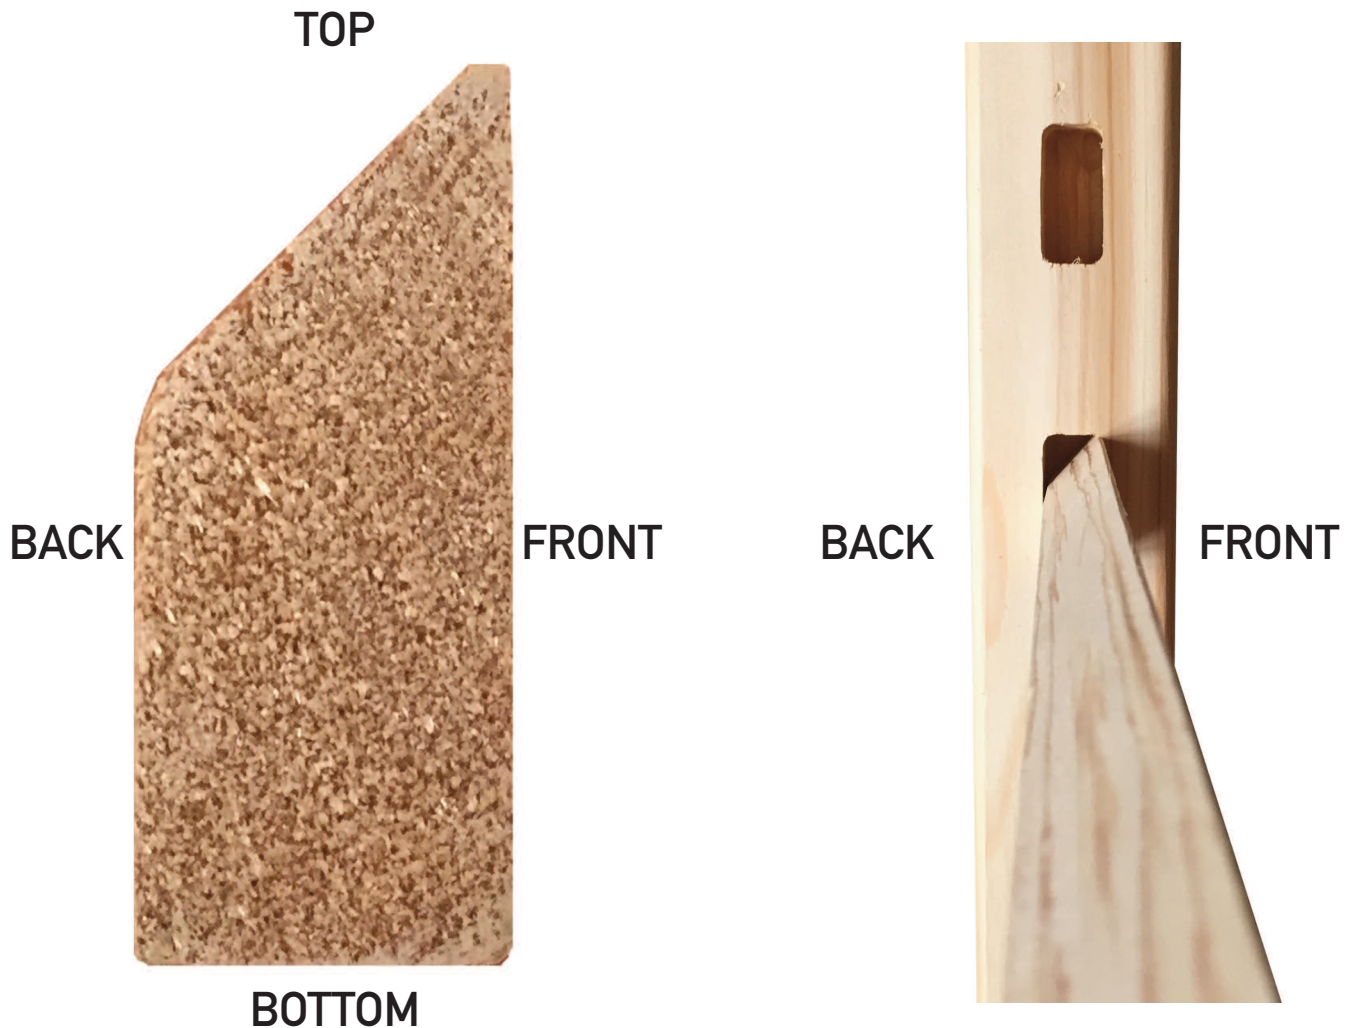


While assembling your VGWM on a flat surface, the flat (FRONT) side will always be facing up. While assembling the top portion of your VGS, the point (TOP) of part D will always point TOWARDS part B (HEADER). While assembling the bottom portion of your VGWM, the point (TOP) of part D will always point AWAY from part C (FOOTER).

1.



To start assembly of your VGWM, lay out part A, part B & parts C on a flat surface as shown above. The large groove in part A will be towards the top of part A. The flat side of all parts C MUST be facing up, the same way as the logo on part B (the front) & the angled edges must be pointing up, towards part B.

2.

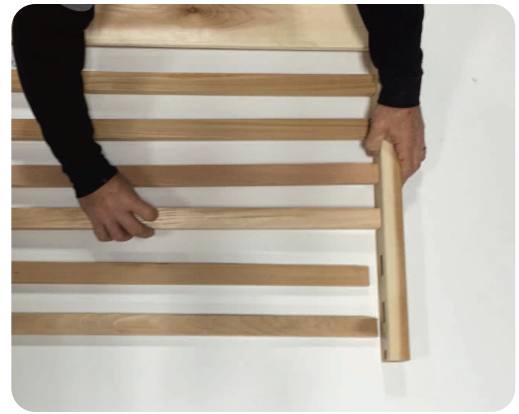

Insert part B and parts C into part A as far as they will go into the grooved slots.

3.



Your assembly should now look like the picture above.

4.



Place a second part A on the other side of the assembly as shown above.

5.




Gently slide part B & parts C into the grooved slots on the other part A, keeping the second part A stationary and keeping part B & parts C in the previous grooved slots. If done correctly, part B & parts C should be half way in the grooved slots on either part A.

6.




Push both parts A toward each other until part B & parts C are all the way in the grooved slots.

7.

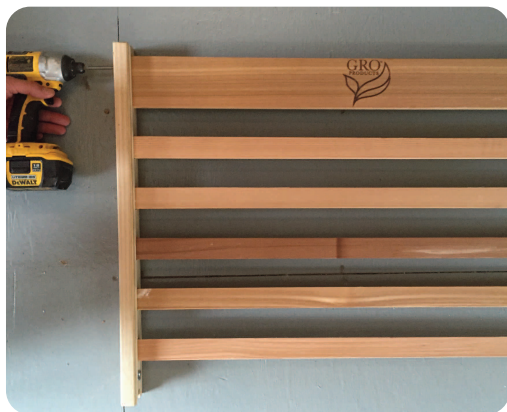

Using a screwdriver or power drill/driver, attach part A to part B & parts C on both sides, using the 2 1/2" provided screws, through the pre-drilled holes. Do this on both sides of your VGWM.

8.

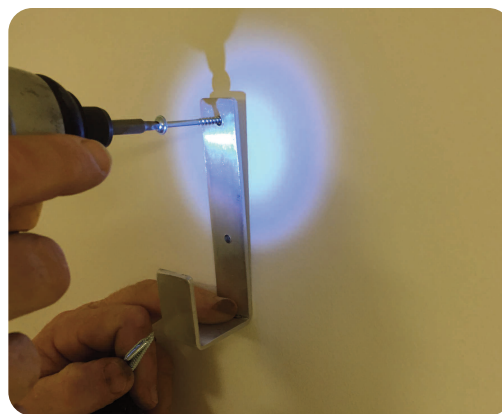

Attach one of the provided brackets to the vertical surface of your choice. You should hit a stud in the wall if possible. If you can not, we suggest purchasing the appropriate wall anchor for the surface; drywall, concrete, etc.

9.



Use a level while hanging the second bracket. Taking the measurement from the outside of the brackets, they should be no more than 20" apart for the VGWM-2024, 24" apart for the VGWM-2424 and 32" apart for the VGWM-3224.

10.



Once both brackets are hung, hang your VGWM on the brackets, on part B as shown above.

11.



You are now ready to hang your planter boxes, fill them with soil and plant your favorite herbs, flowers and vegetables,

We highly suggest sealing your VGWM. This will lengthen the life of your VGWM, helping protect it from the sun, rain & other elements.