



Innovative Solutions for Gardeners Everywhere!®

Assembly Manual

© 2016 GRO Products All Rights Reserved

Veg Wedge

Veg Wedge Parts List • 3040 & 3072



A



B



C



D



E



F



G



H

Other Parts include: Hardware Package & Landscape Fabric

	A		B		C		D		E		F		G		H	
Model	Length	QTY	Width	QTY	Width	QTY	Width	QTY	Width	QTY	Width	QTY	Width	QTY	Width	QTY
VW-3040	43"	4	4 1/2"	2	5 1/2"	2	5"	2	4 1/2"	1	3 3/4"	1	5 1/2"	2	5"	2
VW-3072	43"	4	4 1/2"	3	5 1/2"	3	5"	3	4 1/2"	2	3 3/4"	2	5 1/2"	4	5"	4

3648 Parts

Additional parts include parts K & L. Different parts include parts I & J, instead of parts A & H.



I



J



K



L


	I		J		K		L	
Model	Length	QTY	Width	QTY	Width	QTY	Width	QTY
VW-3648	49 3/4"	2	3"	2	3 1/2"	2	3"	2

1.



Take two parts A (parts I for the 3648) and place them inside each other's notches, keeping the grooved parts going in the same direction, as shown above.

2.

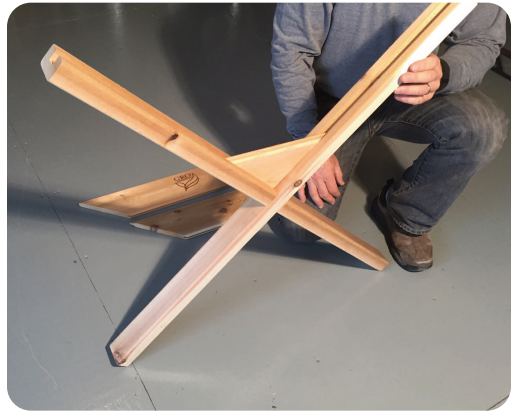

Place part B in the grooves, tight to the bottom of the grooves, as shown above.

3.



Place part C on top of part B, keeping it tight to part B and the inside of the grooves, as shown above.

4.



Place part D on top of part C, keeping it tight to part C and the inside of the grooves, as shown above.
****For the 3648, you'll also place part K above part D.****

5.




Before moving onto the next step, making sure that the gaps between the top of part D (part K for the 3648) and the top of part A (part I for the 3648) is equal and approximately 3/8", as shown above.

6.



Lay this assembly on a flat surface and secure them together using the provided hardware, through the predrilled holes, as shown above. Repeat steps 1-5, once for models VW-3040 and VW-3648 & twice for model VW-3072.

7.

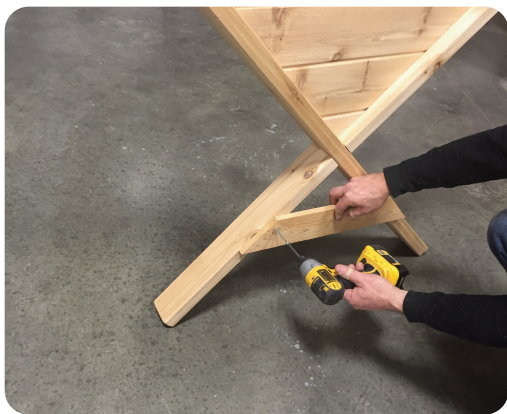

****FOR VW-3648 MODEL ONLY**** Attach part L to parts I on the inside of the assembly (opposite side of the logo), through the pre-drilled holes (4) using the provided screws, as shown above. Make sure part L is level and flush with the outsides of parts I.

8.



Next, put the X braces upright & apart, approximately the length of the trough boards. The GRO Products logo will be on the outside of both ends.

9.



Place part E in the "V" first, with the smooth side out, making sure you keep the ends tight to the X braces as shown above.

10.



Once the trough board is in place, attach it to the Wedge frame through the pre-drilled holes, using the provided screws as shown above. Be sure to keep the X brace tight with the trough boards.

11.



Next, place Board F in the Wedge, on top of part E, making sure the notches are facing down & keeping the smooth side out. Continue to attach the boards as you place them. It is important the notches face down for drainage.

12.



Place two parts G (three parts G for the 3648) on each side of the Wedge, keeping the smooth side out and the groove all the way down on the tongue of the preceding board. Attach them as shown in Figure 9.

12.



Place one part H (Part J for the 3648) on each side of the Wedge, keeping the smooth side out and the groove all the way down on the tongue of the preceding board. Attach them as shown in Figure 9.

If you have the 3072, please move forward with the next steps.

14.



Again, place the final X brace with the GRO Products logo out, approximately the length of the trough boards away from the first completed section, as shown above.

15.



Follow Steps 8-12 once again. Your final product will look like the picture above.

We highly suggest sealing your Veg Wedge. This will lengthen the life of your Veg Wedge, helping protect it from the sun, rain & other elements.
